


R.S. Barrier

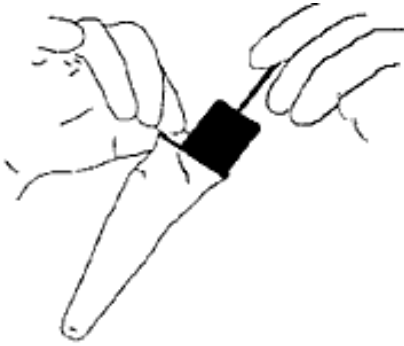


Barrier will accommodate all sensor sizes. Push sensor toward end of barrier until snug fit is achieved. When using with Wingers, leave some excess barrier at the closed end to allow for stretching.

(Item#088-088/89)

R.S. Barrier

(088-088) - *Removal*

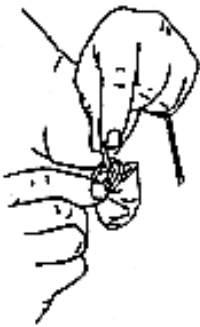

1 - Grasping open end, turn barrier inside-out as it is pulled off sensor.



2 - Where barrier is snug around sensor, roll remainder off.