Wingers™ Cube

Use Instructions

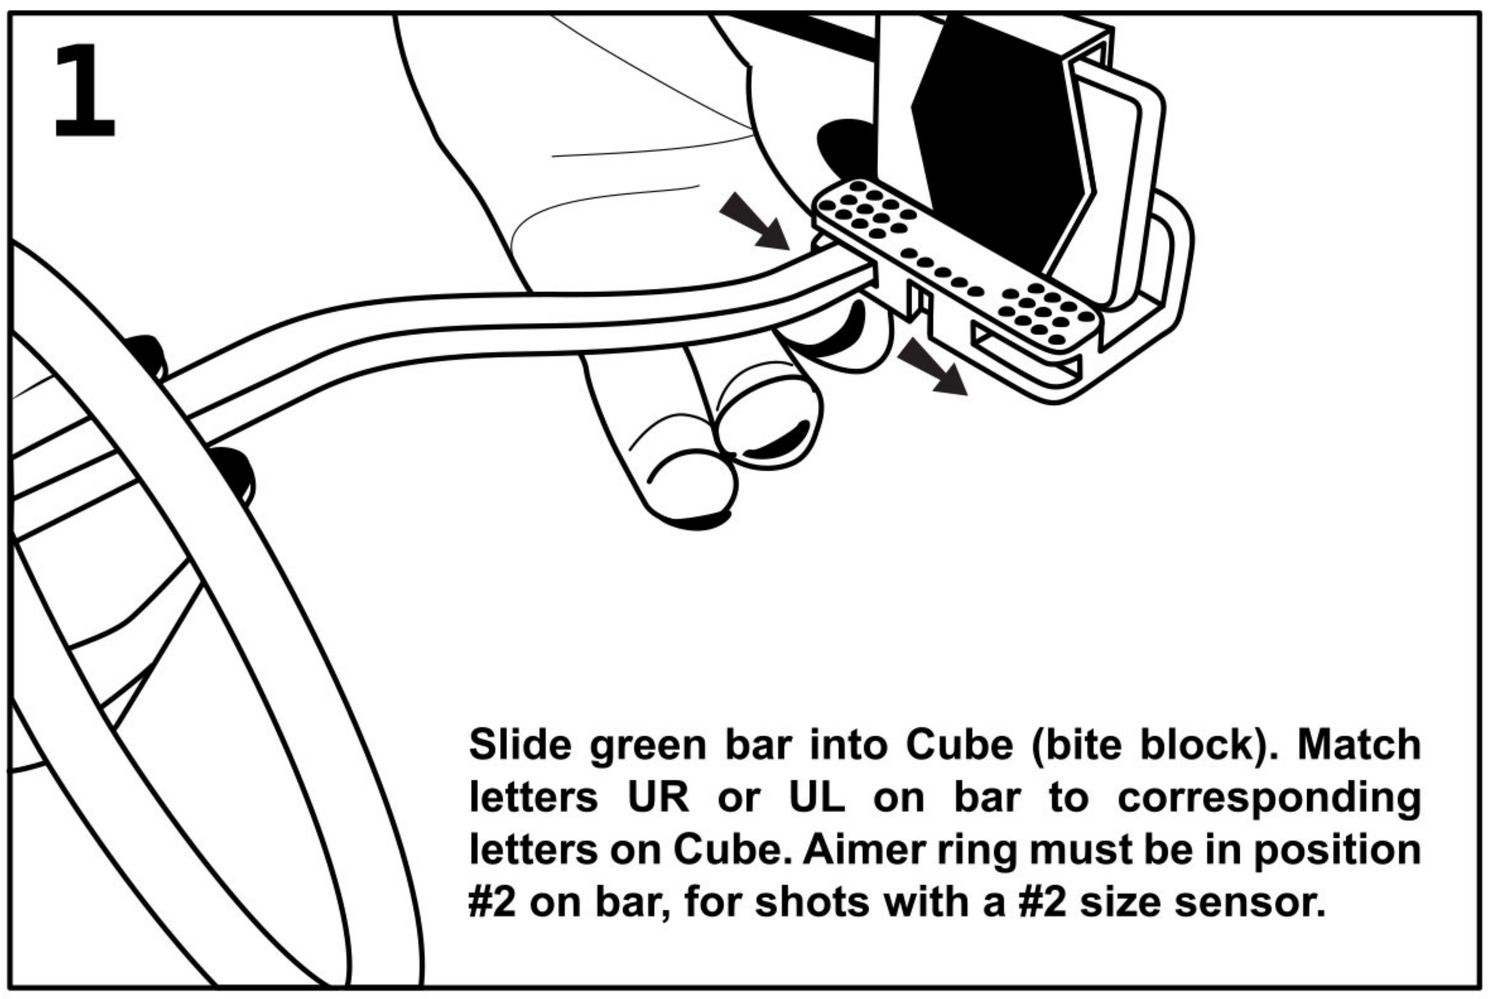

Slide green bar into Cube (bite block). Match letters UR or UL on bar to corresponding letters on Cube. Aimer ring must be in position #2 on bar, for shots with a #2 size sensor.

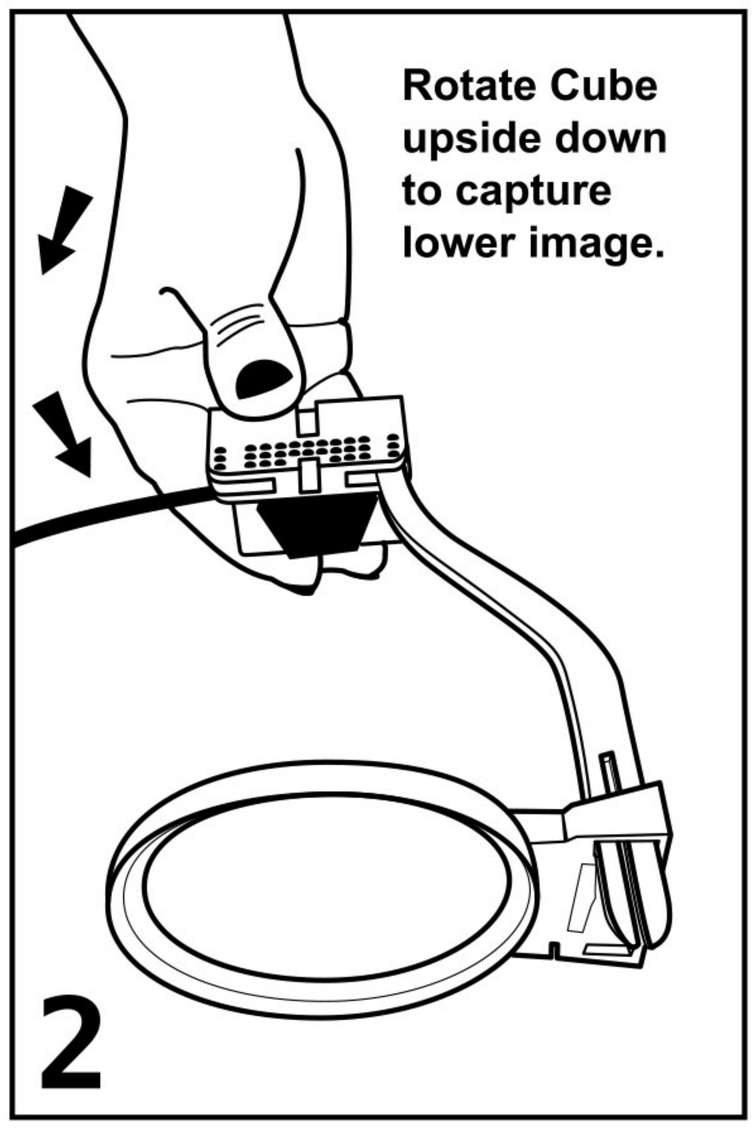

Turn sensor and move bar to opposite slot to capture second set of posterior images.

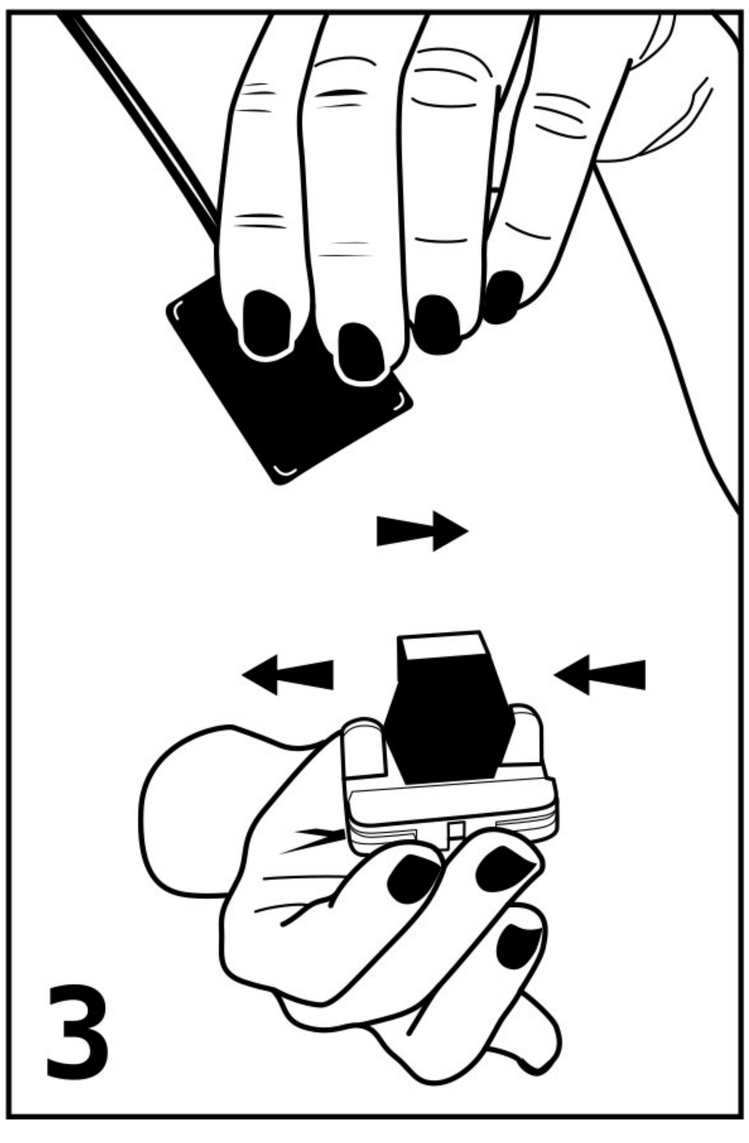

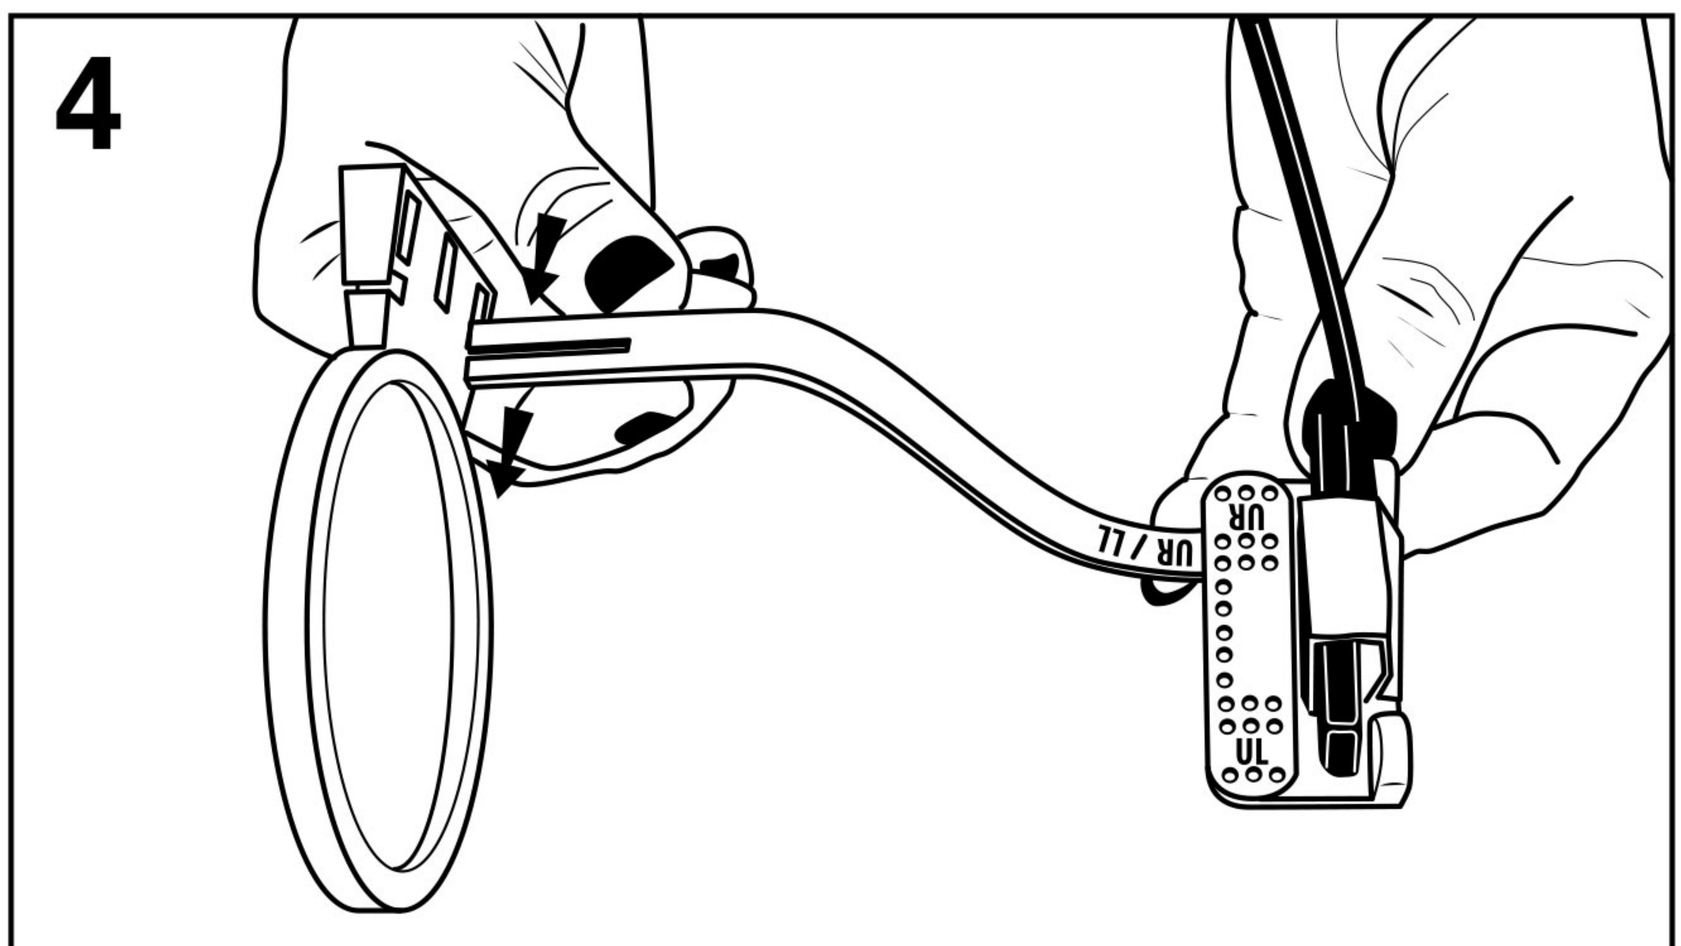

For all posterior images captured with a small or #1 size sensor, use the #1 position on the Aimer ring.

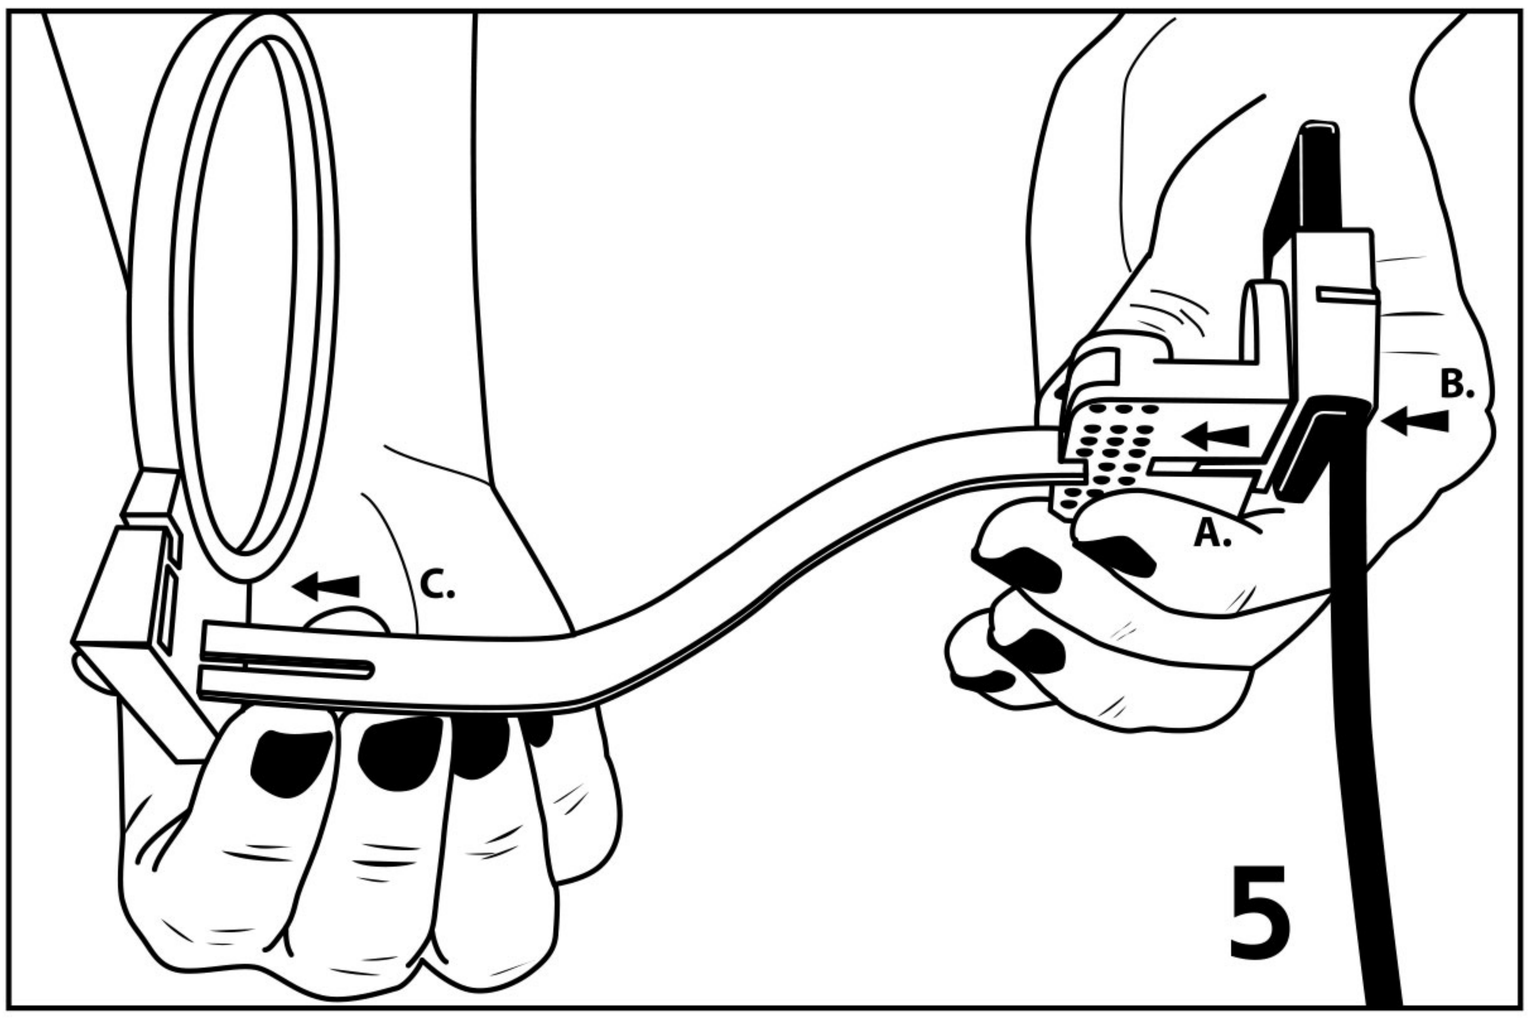

For all Anterior images, slide a #1 or #2 sensor holder (lower notch) into Cube center slot (A). Bottom of sensor should be "flush" with bottom of sensor holder (B). Insert bar into "center" hole on Aimer Ring (C). Turn set upside down to capture lower Anterior images.

STERI-SHIELD PRODUCTS

Tel. 805.692.4972

Fax 805.692.4992

Toll free 1.800.699.7220

Wingers™
Cube

Proper ring positions for posterior images

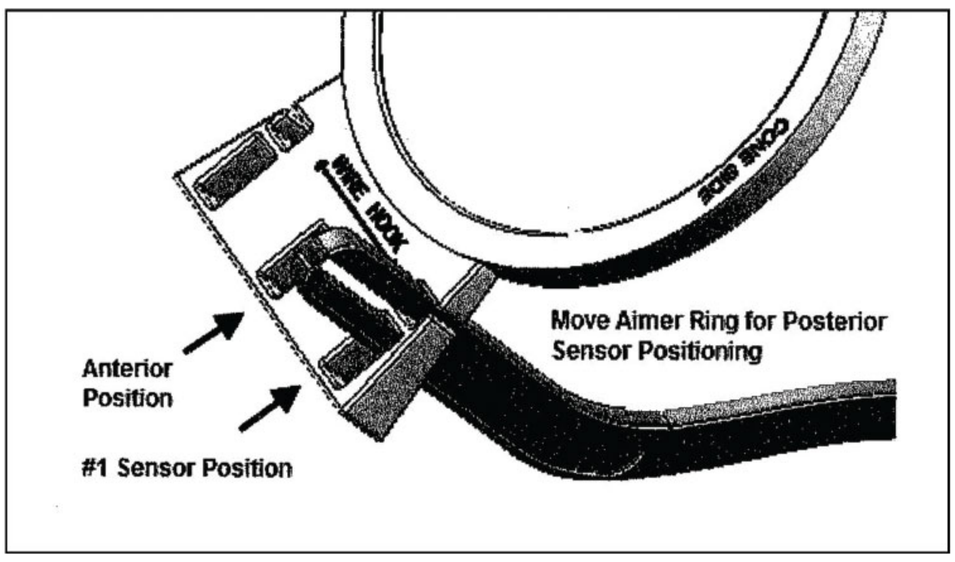

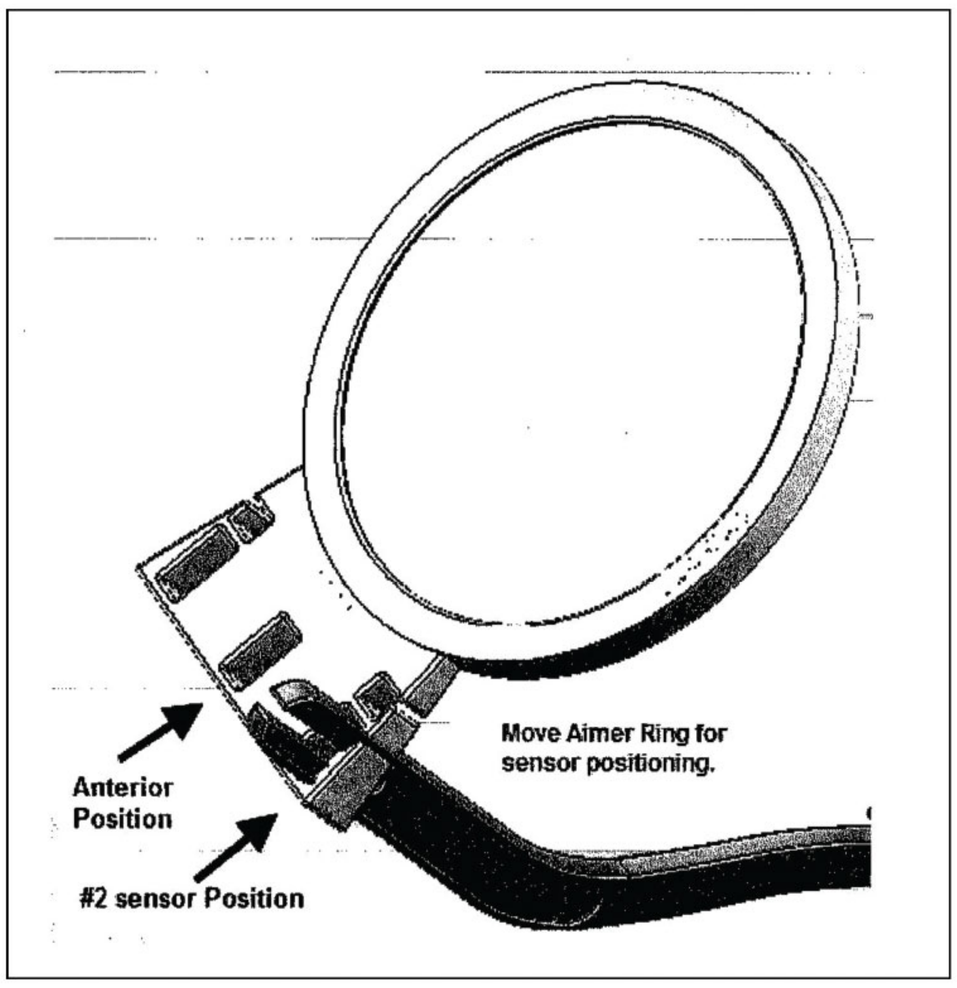

STERI-SHIELD PRODUCTS
Tel. 805.692.4972
Fax 805.692.4992
Toll free 1.800.699.7220