


Phosphor-Ray™ Disposable Bisecting Angle Tool

- Use Instructions -


Preparation

Separate a single Phosphor-Ray positioner. Hold a single plate of foam positioners (6 pcs), flex the end unit up and down gently until it breaks free.

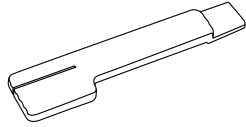


Posterior/Periapical Setup

1. Gently separate slot on wide end of tool and slide phosphor plate into slot until it stops. Phosphor side (blue) facing x-ray source.

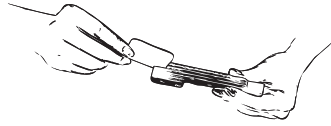

2. Position phosphor plate so that approximately 80% of the plate sits above the bite plane and 20% resides in the slot.

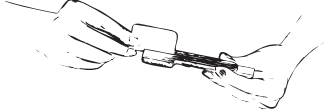


Adhesive Foam Setup

1. Remove a single adhesive foam square from the die-cut foam provided.



2. Adhere into depression at narrow end of tool. Peel white backing paper from foam square. Place Phosphor plate on center of adhesive foam, phosphor side facing x-ray source.

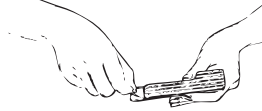


© 2006 Steri-Shield

Phosphor-Ray™ Disposable Bisecting Angle Tool

- Use Instructions -


Preparation

Separate a single Phosphor-Ray positioner. Hold a single plate of foam positioners (6 pcs), flex the end unit up and down gently until it breaks free.

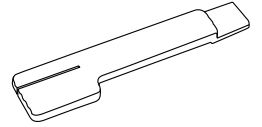


Posterior/Periapical Setup

1. Gently separate slot on wide end of tool and slide phosphor plate into slot until it stops. Phosphor side (blue) facing x-ray source.

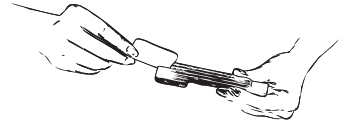

2. Position phosphor plate so that approximately 80% of the plate sits above the bite plane and 20% resides in the slot.

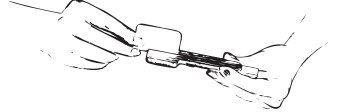


Adhesive Foam Setup

1. Remove a single adhesive foam square from the die-cut foam provided.



2. Adhere into depression at narrow end of tool. Peel white backing paper from foam square. Place Phosphor plate on center of adhesive foam, phosphor side facing x-ray source.

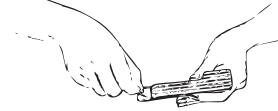


© 2006 Steri-Shield

Phosphor-Ray™ Disposable Bisecting Angle Tool

- Use Instructions -


Preparation

Separate a single Phosphor-Ray positioner. Hold a single plate of foam positioners (6 pcs), flex the end unit up and down gently until it breaks free.

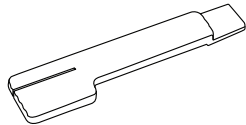


Posterior/Periapical Setup

1. Gently separate slot on wide end of tool and slide phosphor plate into slot until it stops. Phosphor side (blue) facing x-ray source.

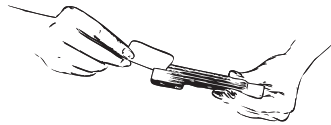

2. Position phosphor plate so that approximately 80% of the plate sits above the bite plane and 20% resides in the slot.

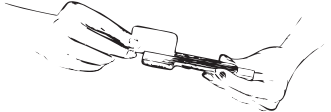


Adhesive Foam Setup

1. Remove a single adhesive foam square from the die-cut foam provided.



2. Adhere into depression at narrow end of tool. Peel white backing paper from foam square. Place Phosphor plate on center of adhesive foam, phosphor side facing x-ray source.

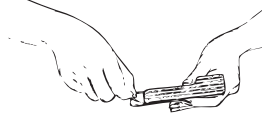


© 2006 Steri-Shield

Phosphor-Ray™ Disposable Bisecting Angle Tool

- Use Instructions -


Preparation

Separate a single Phosphor-Ray positioner. Hold a single plate of foam positioners (6 pcs), flex the end unit up and down gently until it breaks free.

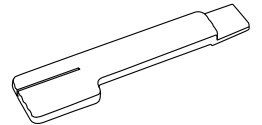


Posterior/Periapical Setup

1. Gently separate slot on wide end of tool and slide phosphor plate into slot until it stops. Phosphor side (blue) facing x-ray source.

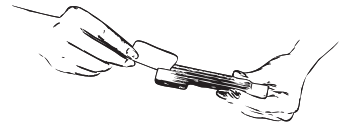

2. Position phosphor plate so that approximately 80% of the plate sits above the bite plane and 20% resides in the slot.

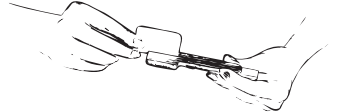


Adhesive Foam Setup

1. Remove a single adhesive foam square from the die-cut foam provided.



2. Adhere into depression at narrow end of tool. Peel white backing paper from foam square. Place Phosphor plate on center of adhesive foam, phosphor side facing x-ray source.

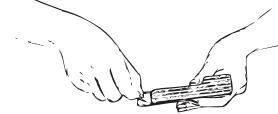

© 2006 Steri-Shield